

Grand PAN/ TILT IP Camera

Grand PAN/ TILT Wi-Fi Camera

Dec 15, 27
34463000

QUICK GUIDE

1. Hardware Overview

Grand PAN/ TILT IP Camera




Grand PAN/ TILT Wi-Fi Camera



2. Connecting to a Network

Connect the Grand PAN/ TILT IP or Wi-Fi Camera to an Ethernet hub or switch by using a standard cable. Also, you can connect computer by cross-over provided directly.

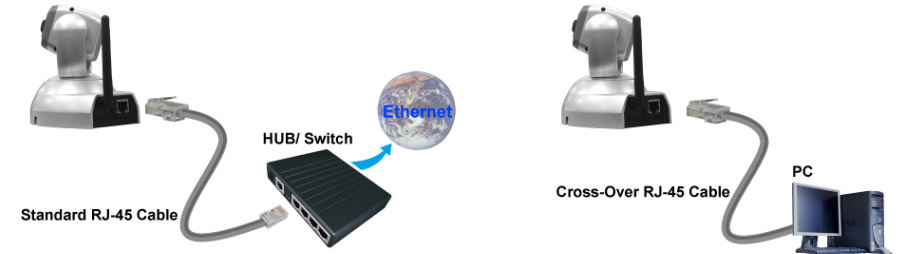


Works Over Ethernet
(can be connected from anywhere via ethernet)

Can only be connected by the PC


3. Network Installation

Confirm that the camera is already connected to the network.


Step 1: Execute the "Setup.exe" to install the "IPCamFinder" software in the CD driver. Execute the "IPCam Setup" on the desktop, and the following screen is displayed.

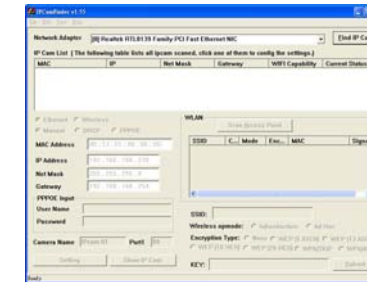

Step 2: Click the "Find IP Cam" button, and your camera's MAC, default IP Address, Net Mask and Gateway will be listed.

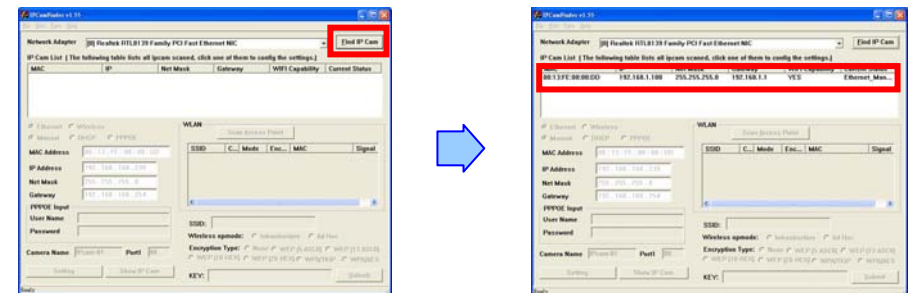


Step 3: Click on the “MAC”, and the “IP Address”, “Net Mask” and “Gateway” will be displayed as below.

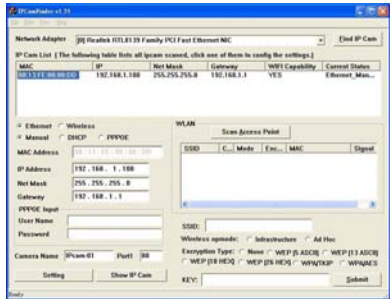


NOTE: The IP Address, Net Mask and Gateway must be corresponding with your network settings for you to access the camera. As below steps that you could follow to get your network information.

Click “Start” → “All Programs” → “Accessories” → “Command Prompt”. A MS-DOS window will appear. Type “ipconfig” and then press “Enter” to get your network information.

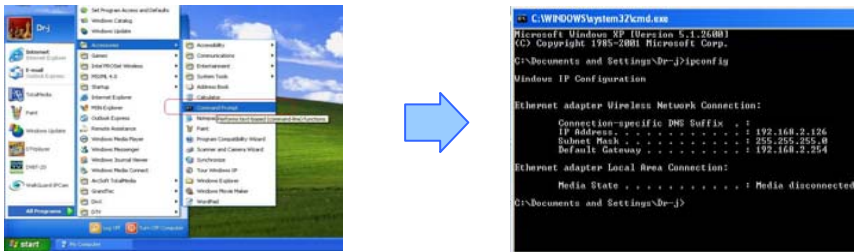


- Assign IP Address, Netmask (Subnet Mask) and Gateway (Default Gateway) for the Grand Pan/ Tilt IP or Wi-Fi Camera. (You must use the same Net Mask (ex. 255.255.255.0) and Gateway (192.168.2.254). You can use any IP address between 192.168.2.1-254, but make sure that the IP Address has never been used or is used by another IP addressable device.)


Step 4: Directly modify the “IP Address”, “Net Mask” and “Gateway”, and click “Setting” to save.

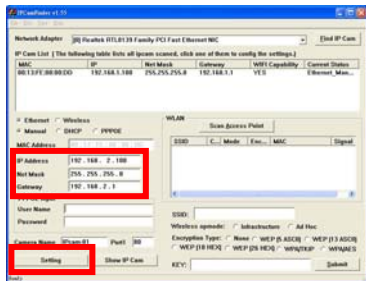

Step 5: Click the “Find IP Cam” button again, and the new network information will be listed.

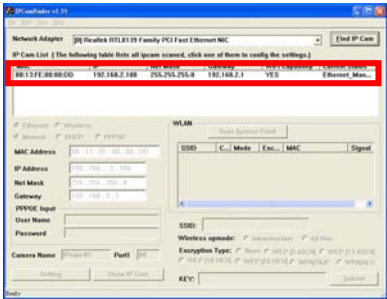

Step 6: Select the “MAC” and click the “Show IP Cam” button to connect the Grand Pan/ Tilt IP or Wi-Fi Camera.

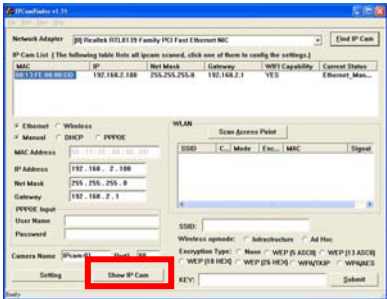

Step 7: When the login screen appears, enter the user name and password (default user name: root, default password: admin), and click the “OK” button to login your camera.



PS. Please consult the “User Manual.doc” in Driver CD for more detail.